

C DOCUMENTS.HELP, HELP\*, Technical Publications, 06/02/86

C HELP file for DOCUMENTS

C Copyright (c) 1986, Prime Computer, Inc., Natick, MA 01760

DOCUMENTS (List of current technical publications)

This file lists all the books that support PRIMOS Revision 20.2. See the Guide to Prime User Documents (DOC6138-4PA) for descriptions of these books.

To order technical documentation: inside the United States, call Prime Telemarketing at 800-343-2533; outside the United States, contact your local Prime subsidiary or distributor.

Books are grouped by these topics:

OPERATING SYSTEM (PRIMOS)	OFFICE AUTOMATION (OAS)
UTILITIES	PRODUCER/PERFORMER WORKSTATIONS
ASSEMBLY LANGUAGE/ARCHITECTURE	PRIME INFORMATION
COMMUNICATIONS	PRIMIX
PRIME/SNA	PRIMEWAY
DATA MANAGEMENT	PRIME 50 SERIES
LANGUAGES	TERMINALS/PERIPHERALS/SITE PREPARATION
PERSONAL COMPUTERS	

In document numbers, P refers to perfect bound editions; L refers to loose-leaf editions; P/L means the book is available in both formats. Asterisks mark books that are new or revised at Rev. 20.2.

#### OPERATING SYSTEM (PRIMOS)

#### COMPUTER ROOM OPERATIONS

Prime 2250 Planning and Installation Guide DOC6515-191P/191L

Prime 400 Handbook DOC8799-1LA

Prime 850 Handbook DOC10063-1LA

Prime 2250 Handbook DOC10073-1LA

Prime 2550 Handbook DOC8638-192P/192L  
Update UPD8638-11A

Prime 2655 Handbook DOC8638-2LA

Prime 9950 Handbook DOC8887-192P/192L

Prime 9955 Handbook DOC8887-2LA

Operator's System Overview DOC9298-1PA/1LA  
Update UPD9298-11A

Operator's Guide to System Monitoring DOC9299-1PA/1LA

Operator's Guide to File System Maintenance DOC9300-1PA/1LA

Update UPD9300-11A  
Update UPD9300-12a

\* Operator's Guide to File System Maintenance DOC9300-2LA

Operator's Guide to System Backups DOC9301-1PA/1LA  
Update UPD9301-11A  
Update UPD9301-12A

\* Update UPD9301-13A

Operator's Guide to the Batch Subsystem DOC9302-1PA/1LA

Operator's Guide to the Batch Subsystem DOC9302-2LA

Operator's Guide to the Spooler Subsystem DOC9303-1PA/1LA

Operator's Guide to System Commands DOC9304-1PA/1LA

Operator's Guide to System Commands DOC9304-2LA

\* Update UPD9304-21A

System Operator's Companion FDR7812-192

System Administrator's Guide DOC5037-3LA

\* System Administrator's Guide DOC5037-4LA

System Administrator's Companion FOR3622-192

SOFTWARE RELEASES

Rev. 19.0 Software Release Document MRU4304-008

Rev. 19.1 Software Release Document MRU4304-009

Rev. 19.2 Software Release Document MRU4304-010

Rev. 19.3 Software Release Document MRU4304-011

Rev. 19.4 Software Release Document DOC10001-1PA

Rev. 20.0 Software Release Document DOC10001-2PA

\* Rev. 20.2 Software Release Document DOC10001-3PA

USER AND REFERENCE GUIDES

Prime User's Guide DOC4130-4PA/4LA  
Update UPD4130-41A

PRIMOS Commands Reference Guide DOC3108-5PA/5LA  
Update UPD3108-51A

\* Update UPD3108-52A

PRIMOS Commands Programmer's Companion FDR3250-192

Using Your Prime 2250 DOC6516-191P/191L

Using Your Prime 2250 DOC6516-2LA

Using Your Prime 2550 DOC8552-192P/192L

Update UPD8552-11A

Using Your Prime 2655 DOC8552-2LA

ICS2 User's Guide DOC10044-1PA/1LA

Advanced Programmer's Guide, Vol.I DOC10066-1LA

Advanced Programmer's Guide, Vol.I DOC10055-1LA

Advanced Programmer's Guide, Vol.II DOC10056-1LA

Advanced Programmer's Guide, Vol.III DOC10057-1LA

## SUBROUTINES

Subroutines Reference Guide DOC3621-190P/190L

Update UPD3621-31A

Update UPD3621-32A

Subroutines Reference Guide DOC10080-1LA

Subroutines Reference Guide DOC10081-1LA

Subroutines Reference Guide DOC10082-1LA

Subroutines Reference Guide DOC10083-1LA

## UTILITIES

### COMMAND PROCEDURE LANGUAGE (CPL)

CPL User's Guide DOC4302-190P/190L

CPL Programmer's Companion FDR7811-193

### DEBUGGERS

Source Level Debugger Guide DOC4033-192P/192L

Update UPD4033-21A

\* Update UPD4033-22A

Loading and Debugging Programmer's Companion FDR5094

Source Level Debugger Programmer's Companion DOC8916-1PA

### EDITORS AND TEXT FORMATTERS

New User's Guide to EDITOR and RUNOFF FDR3104-101A/101B

Change sheets COR3104-001

Change sheets COR3104-002

EMACS Primer IDR6107

EMACS Reference Guide IDR5D26  
Update PTU2600-105  
Update PTU2600-107  
Update UPD5026-13A

EMACS Extension Writing Guide DOC5025-2LA

EMACS Standard User Interface Guide DOC7446-2LA

#### LOADERS

Programmer's Guide to BIND and EPFs DOC8691-1PA/1LA

SEG and LOAD Reference Guide DOC3524-192P/192L  
Update UPD3524-21A

Loading and Debugging Programmer's Companion FDR5094

#### MAGNETIC TAPE

Magnetic Tape User's Guide DOC5027-2PA/2LA

#### ASSEMBLY LANGUAGE/ARCHITECTURE

Assembly Language Programmer's Guide FDR3059-101A/101B  
Change sheets COR3059-001  
Update PTU260D-104

Assembly Language Programmer's Companion FDR334D

System Architecture Reference Guide DOC9473-1LA  
Update UPD9473-11A  
Update UPD9473-12A  
Update UPD9473-13A

Instruction Sets DOC9474-1LA  
Update UPD9474-11A  
Update UPD9474-12A  
Update UPD9474-13A

#### COMMUNICATIONS

#### DISTRIBUTED PROCESSING TERMINAL EXECUTIVE (DPTX)

Distributed Processing Terminal Executive Guide DOC4035-193  
Update UPD4035-21A

#### PRIMENET

PRIMENET Guide DOC3710-193P/193L  
Update UPD3710-32A  
\* Update UPD3710-33A

Network Planning and Administration Guide DOC7532-2PA/2LA

REMOTE JOB ENTRY

Remote Job Entry Phase II Guide DOC6053-3LA

PRIME/SNA

PRIME/SNA Administrator's Guide DOC8908-1PA/1LA

PRIME/SNA Administrator's Guide DOC8908-2LA

PRIME/SNA Operator's Guide DOC8909-1PA/1LA

PRIME/SNA Operator's Guide DOC8909-2LA

PRIME/SNA Interactive Terminal User's Guide DOC8910-1PA/1LA

PRIME/SNA Interactive Terminal User's Guide DOC8910-2LA

DATA MANAGEMENT

DATA BASE MANAGEMENT SYSTEM (DBMS)

DBMS Data Manipulation Language Reference Guide DOC5308-190P/190L  
Update UPD5308-11A

DBMS Data Description Language Reference Guide DOC5717-181P/181L  
Update UPD5717-11A

DBMS Administrator's Guide DOC6292-192P/192L  
Update UPD6292-11A

Update UPD6292-12A

\* Update UPD6292-13A

DBMS User's Guide DOC6291-192P/192L

DBMS Programmer's Companion DOC8645-1XA

DISCDVER

DBMS/QUERY Report Generator Casebook IDR5650

DISCDVER Reference Guide DOC7798-192

Update UPD7798-11A

\* Update UPD7798-12A

DISCOVER User's Guide DOC7799-1PA/1LA

Update UPD7799-11A

## FORMS MANAGEMENT SYSTEM (FORMS)

FORMS Programmer's Guide PDR3040-163P  
Update PTU2600-061  
Update PTU2600-070  
Update PTU2600-091  
Update PTU2600-110

FED User's Guide DOC4940-191

## MIDAS

MIDAS User's Guide IDR4558-176P  
Update PTU2600-089

MIDASPLUS Concepts DOC9243-1PA/1LA

MIDASPLUS User's Guide DOC9244-1PA/1LA  
Update UPD9244-11A  
\* Update UPD9244-12A

## PRIME/POWER

PRIME/POWER Guide PDR3709  
Update PTU2600-072  
Update PTU2600-090

PRIME/POWER Companion [17.2] FDR4034

## PRISAM

PRISAM User's Guide DOC7999-2PA/2LA  
Update UPD7999-21A  
\* PRISAM User's Guide DOC7999-3LA

## ROAM

\* ROAM Administrator's Guide DOC7345-2LA  
\* \* Update UPD7345-21A

## LANGUAGES

### BASIC (Interpretive)

Interpretive BASIC Programmer's Guide IDR1813-140P

### BASIC/VM

BASIC/VM Programmer's Guide FDR3058-101A/101B  
Change sheets COR3058-001

Change sheets COR3058-002  
Update UPD3058-33A

BASIC/VM Programmer's Companion [18.1] FDR3341

#### C Language

C User's Guide DOC7534-2LA  
Update UPD7534-21A

C Programmer's Companion FDR8419-193

#### COBOL 74 (CBL)

COBOL 74 Reference Guide DOC5039-2LA

COBOL to CBL Conversion Guide MAN10002-1LA

#### FORTRAN (FTN)

FORTRAN Reference Guide FDR3057-101A/101B  
Change sheets COR3057-001  
Change sheets COR3057-002  
Update UPD3057-33A

FORTRAN Programmer's Companion FDR3338

#### FORTRAN 77 (F77)

FORTRAN 77 Reference Guide DOC4029-4PA/4LA  
Update UPD4029-41A

FORTRAN 77 Programmer's Companion FDR4030

#### PASCAL

Pascal Reference Guide DOC4303-191P/191L  
Update UPD4303-192  
Update UPD4303-21A

\* Pascal Reference Guide DOC4303-3LA

Pascal Programmer's Companion FDR7095-192

#### PL/I

PL/I Reference Guide DOC5041-1LA

PL/I Conversion Guide DOC5769-1LA

#### PL/I Subset G

PL/I Subset G Reference Guide IDR4031  
Update PTU2600-075

Update PTU2600-084  
Update UPD4031-13A

RPG II V-mode Compiler

RPG II V-mode Compiler Reference Guide IDR5040  
Update PTU2600-094  
Update PTU2600-107 (EMACS Interface)  
Update UPD5040-11A

RPG II V-mode Compiler Reference Guide DOC5040-2LA

Prime RPG II Debugging Template IDR11001-2XA

OFFICE AUTOMATION

Release 4.2

OAS Overview and Getting Started (PST 100) DOC10018-1LA

OAS Overview and Getting Started (PT200) DOC10019-1LA

WORD PROCESSING

OAS Word Processing Guide (PT65) DOC6756-040

OAS Word Processing Guide (PT45) DOC6877-040

OAS Word Processing Guide (PST 100 and PT200) DOC10014-1LA

MANAGEMENT COMMUNICATIONS AND SUPPORT

OAS Management Communications and Support Guide (PT45 and PT65) DOC6755-040

OAS Management Communications and Support Guide (PST 100) DOC10010-1LA

OAS Management Communications and Support Guide (PT200) DOC10011-1LA

SYSTEM ADMINISTRATION

OAS Administrator's Guide (PST 100 and PT200) DOC10017-1LA  
Update: Hardware for the OAS Administrator PTU2600-113

OAINFO

OAINFO Guide DOC10068-1LA

PRIME TIMER

PRIME TIMER User's Guide DOC8804-011



## UPDATES

New PT65 Keyboard PTU2600-095  
Using OAS on the PT25 Management Workstation PTU2600-100  
Using OAS on Hard Copy and Non-OAS Standard Terminals PTU2600-102

Release 5.0

## OVERVIEW

OAS Overview and Getting Started DOC10092-1LA

## WORD PROCESSING

OAS Word Processing Guide DOC10092-1LA

## MANAGEMENT COMMUNICATIONS AND SUPPORT

OAS Management Communications and Support Guide DOC10089-1LA

## SYSTEM ADMINISTRATION

OAS Administrator's Guide DOC10017-2LA

## OAINFO

OAINFO Guide DOC10068-2LA

## PRIME TIMER

PRIME TIMER User's Guide DOC8804-2LA

## OAS KEYSTROKE REFERENCE CARDS

PT200 IDR10013-1XA  
PST 100 IDR10018-1XA  
PT65 IDR6756-1XA  
PT45 IDR6757-1XA  
PT25 IDR2600-1XA  
PERFORMER/PRODUCER IDR8863-1XA

## CONVERSION UTILITIES

Document Conversion Utility DOC11000-1LA

## PRODUCER/PERFORMER WORKSTATIONS

Release 1.2 and 1.3

INSTALLATION AND ADMINISTRATION

Prime Producer 100 Workstation Preparation Guide DDC8932-012P/012L  
Prime Producer 100 Planning and Installation Guide DDC8756-012P/012L  
Prime Producer 100 Workstation Administrator's Guide DDC8933-D12P/012L  
Prime Producer 100 Installation and Administration PTU2600-115

WORKSTATION USER

Using Your Prime Producer 100 DDC8863-012P/012L  
Prime Producer 100 Release 1.3 Notes DDC9635-1PA/1LA

WORD PROCESSING

Prime Producer 100 Word Processing Case-By-Case DDC8972-1PA/1LA

CLUSTERING

Prime Producer 100 Miniclustering Guide DDC9710-1PA/1LA

Release 2.0

(The following books document both the Producer and PERFORMER workstations, unless otherwise noted.)

INSTALLATION AND ADMINISTRATION

Installation Guide (PERFORMER only) DDC10038-1XA  
Prime Producer 100 Planning and Installation  
Guide Update (Producer only) UPD8756-11A  
System Administrator's Guide DDC10030-1LA

WORKSTATION USER

System User's Guide DDC10031-1LA

CLUSTERING

Clustering Guide DDC10034-1LA

WORD PROCESSING

Word Processing User's Guide DOC10032-1LA

WP Self-Paced Guide PWS200E-20

MULTIPLAN

Multiplan User's Guide DOC10033-1LA

BUSINESS GRAPHICS PACKAGE

Business Graphics User's Guide DOC10036-1LA

OAINFO

OAINFO Guide DOC10068-2LA

PRIME INFORMATION

Prime INFORMATION INFO/BASIC Reference Guide DOC10023-1XA

INFO/BASIC Debugger Guide DOC7212-054P/054L

Prime INFORMATION Editor Reference Guide PDR3904-051P

INFORM Reference Guide PDR3905

Prime INFORMATION PERFORM Reference Guide DOC10059-1XA

Prime INFORMATION Primer DOC3909-053P/053L

Prime INFORMATION Highlights Companion FDR5212

INFORMATION System Update Release 5.1 MRU5964-001

INFORMATION System Update Release 5.2 MRU5964-002

INFORMATION System Update Release 5.3 MRU5964-003

INFORMATION System Update Release 5.4 MRU5964-004

INFORMATION System Update Release 6.0 DOC10006-1PA

Prime INFORMATION Administrator's Guide DOC10065-1XA

Prime INFORMATION Operator's Guide DOC3907-052P/052L

Prime INFORMATION Configuration Guide DOC6095-051P/051L

Prime INFORMATION SIMPLE User's Guide DOC7325-3PA/3LA

Prime INFORMATION SIMPLE Release Document DOC10029-1PA

Prime INFORMATION CONNECTION

Prime INFORMATION CONNECTION  
Installation and System Administration Guide MAN10041-1LA

Prime INFORMATION CONNECTION  
Word CONNECTION Primer MAN10040-1LA

Prime INFORMATION CONNECTION  
Word CONNECTION Reference Manual MAN10040-1LA

Prime INFORMATION CONNECTION  
Word CONNECTION Quick Reference Guide MAN10038-1LA

Prime INFORMATION CONNECTION  
Graph CONNECTION Primer MAN10037-1LA

Prime INFORMATION CONNECTION  
Graph CONNECTION Reference Manual MAN10036-1LA

Prime INFORMATION CONNECTION  
Graph CONNECTION Quick Reference Guide MAN10035-1LA

Prime INFORMATION CONNECTION  
Financial CONNECTION Primer MAN10034-1LA

Prime INFORMATION CONNECTION  
Financial CONNECTION Reference Manual MAN10033-1LA

Prime INFORMATION CONNECTION  
Financial CONNECTION Quick Reference Guide MAN10032-1LA

PRIMIX

PRIMIX User's Manual MAN9507-1LA

Using PRIMIX on 50 Series DOC9709-1LA

PRIMIX User's Guide MAN9502-1LA

PRIMIX Programmer's Guide MAN9503-1LA

PRIMIX System Support Tools Guide MAN10004-1LA

PRIMIX Release Notes DOC10077-1LA

PRIMIX Document Preparation Guide MAN10005-1LA

PRIMIX Editing Guide MAN10006-1LA

PRIMEWAY

Introduction to PRIMEWAY DOC8973-1PA/1LA

PRIMEWAY Design Guide DOC8974-1PA/1LA

Update UPD8974-11A

PRIMEWAY Configuration Development Guide DOC8975-1PA/1LA

Update UPD8975-11A

PRIMEWAY Transaction Development Guide DOC8976-1PA/1LA

Update UPD8976-11A

PRIMEWAY Forms Guide DOC8977-1PA/1LA

PRIMEWAY Administration Guide DOC8978-1PA/1LA

Update UPD8978-11A

PRIMEWAY Business Environment User's Guide DOC8979-1PA/1LA

Update UPD8979-11A

#### PRIME 50 SERIES

Technical Summary DOC6904-191P/191L

#### TERMINALS/PERIPHERALS/SITE PREPARATION

PT25 TERMINAL

PT25 Guide IDR4603

PT45 TERMINAL

PT45 Guide IDR4604

PT65 TERMINAL

PT65 Guide IDR4605

Update: New PT65 Keyboard PTU2600-095

PST 100 TERMINAL

PST 100 Programming Guide DOC6136-002P/002L

PST 100 Primer DOC6517-002P/002L

PST 100 Installation & Fault Isolation Guide DOC6987-002P/002L

DPTX on the PST 100 PTU2600-108

PT200

PT200 Installation Instructions IDR8619-2XA

PT200 International Installation Instructions IDR8893-1XX

PT200 Terminal Primer DOC8620-2LA  
Update UPD8620-21A

PT200 Programmer's Reference Guide DOC8621-2LA

PT200 Graphics Option Primer DOC8718-1LA

PT200 Graphics Option Programmer's Reference Guide DOC8719-2LA

#### PW200

Using Your PW200 DOC7363-010P/010L

#### LETTER QUALITY PRINTERS

LQP 3175 Guide IDR5024

LQP 3185 Guide DOC7634-001  
Update 1 UPD7634-001

#### SITE PREPARATION

Site Preparation Guide DOC5029-3LA

Prime 2250 Site Preparation Guide DOC6514-191P/191L

Prime 2550 Site Preparation Guide DOC8551-192P/192L

Prime 2655 Site Preparation Guide DOC8551-3LA/3PA  
Update UPD8551-21A

Prime Office Systems Site Preparation Guide DOC10058-1LA

Prime T3350 Site Preparation Guide DOC10075-1LA

#### PERSONAL COMPUTERS

#### PERFORMER PC Documentation Package SPD10461-001

(The books in the PERFORMER PC package can only be purchased as a set, using the SDP number listed above. The set includes five books, listed below, and a binder and a slipcase for the set. The binder and slipcase can be ordered separately as IDR10030-1XA.)

PERFORMER PC Installation Guide DOC9714-2LA

PERFORMER PC Operations Guide DOC9713-1LA

PERFORMER PC Microsoft MS-DOS Reference Guide DOC9711-1LA

PERFORMER PC Diagnostics Guide DOC9712-1LA

PERFORMER PC Release Notes DOC10093-1LA

#### PERFORMER PC PRIMELINK User's Guide DOC10053-1LA

Update UPD10053-1LA